Instructor's Station **Equipment**

Control System

The Creston Control System connects all of the classroom AV equipment. Touch the screen on the instructor's station to wake it up.



Power

This step turns the projector on and lowers the projection screen.

Follow the instructions on the center of the screen; you may need to power on the desktop computer.



Select Device

Select the device you wish to control:


- Computer
- Laptop (plug into HDMI cable on desk)
- Blu-ray
- Doc Cam
- Apple TV
- Aux Inputs



Additional Functions

Select to:


- Control screen
- Adjust mic volume, if applicable
- Connect additional components

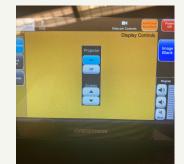

Control Web Cam

Select WebCam from top menu to access webcam control. Three views are available:

- Teaching Station: Focus on instructor
- Board: Broader view of instructor and whiteboard
- Wide view: Encompasses student desks

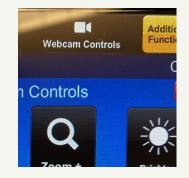


Use Doc

The doc cam enables projection of documents onto the screen (think overhead projector!). Switch to Doc Cam on the control panel. Use the doc cam controls to zoom and focus.



Dual Monitors

The classrooms are equipped with dual monitors. The projector displays the image shown on the right-hand monitor. Use dual monitors to share a presentation while viewing notes or upcoming slides. To show other applications, i.e. internet browsers, Word, etc., drag the window to the righthand monitor.

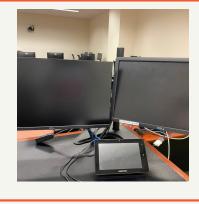

Power Off

Before leaving the classroom, log out of your account and power down all equipment.

For security purposes, it is vital that you log out of your account before leaving the classroom.



Get

Need equipment help during class? Call

Help Desk 609-771-2660

Visit Media & Technology Support Services Tech-Enable Spaces for more information on your assigned classroom.

